



MICROTECH

PRECISION CUTLERY SINCE 1994

CARTRIDGE REPLACEMENT

The Kyroh™ features an elongated body that accepts a pressurized Fisher Space cartridge. Pen refills can be obtained online from the Fisher Space website at spacepen.com and are available in blue or black and in various weights.

KYROH™ STORAGE

The Kyroh™ should always be stored in the closed position with the tip away from the elements.

ONLINE RESOURCES

Additional help, articles and videos available online at support.microtechknives.com.

FIND US ON



@microtechknivesofficial

OPTIONAL PRODUCT REGISTRATION

We suggest you register your product online at microtechknives.com. This registration is not required for warranty coverage, but is helpful for our customer service efforts.

WARNING! This product may contain a chemical known to the state of California to cause cancer, birth defects or other reproductive harm.

Microtech® and its designs are registered trademarks of Microtech® Knives Inc. All rights reserved. Any unauthorized reproduction of any materials herein is strictly prohibited by law.



**KYROH™
PRODUCT MANUAL**

MICROTECH®

WELCOME TO THE MICROTECH® FAMILY

Thank you for choosing Microtech®. We believe that when you purchase a Microtech® item, you have bought the best. Our talented associates work hard to ensure that every product surpasses your expectations. We stand behind our premium materials and quality craftsmanship. For more information on Microtech® and our mission, please visit us at microtechknives.com.

LIMITED LIFETIME WARRANTY

Our warranty covers the function of the product (including internal parts) for the lifetime of the product, based on availability. Our warranty does not cover normal signs of wear and tear, cosmetic refurbishments, replacement parts, accidents, loss or theft.

For any warranty-related inquiries, visit our support portal at support.microtechknives.com.

OPERATION

TO OPEN: Locate the L bolt lever mechanism (A) and use your thumb to pull lever down and to the right into the locked position, deploying the tip. The lever remains locked in place during use.



TO CLOSE: Simply slide the L bolt lever mechanism (A) to the left with your thumb until the lever snaps back into the original closed position.

CARTRIDGE REPLACEMENT

TO REPLACE: First, ensure that the pen is in the open position. Then, grip the textured area (B), and twist apart the top half of the pen counterclockwise to separate the top and bottom portions of the pen. Pull the ink cartridge from the tip and insert the new cartridge; press until snug. Lastly, mate the upper and lower pen halves by gripping the textured area and turning it clockwise until finger-tight.

